




Mobile-i Instruction Manual




	Please read this manual before using the Mobile-i,
	and keep for future reference, thank you.
2	3

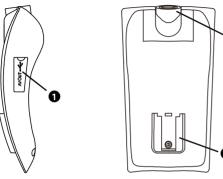


- **1** USB & AV-out **5** Mic. On-Off
- 2 Camera

- 6 Reset Key
- 4 Camera Lock 8 Power & Video On-Off

 Product overview



- Buzzer
- 10 LED- Blue
- 1 LED- Green
- LED- Red

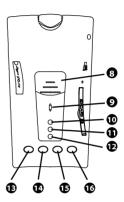

- 13 Down
- **1** Up
- **1** Enter
- 16 Mode

Contents

Mobile-i	1PC
Suction Cup Holder	1PC
Fixed Holder	1PC
Car Charger	1PC
USB Cable	
TV Cable	1PC
CD-Rom.	1PC







Mobile-i

Suction Cup Holder

Fixed Holder











Car Charger

USB Cable

TV Cable

CD-Rom

Please setup the Date & Time into Mobile-i before install to your vehicle:


Date & Time setting (PC)

- 1. Press and hold the key 'Power & Video On-Off' for a second, then the green light is on.
- 2. Connect HD Mobile-i to PC by USB cable, then both of the blue and green light are on.
- 3. A removable dish will show up in my computer immediately as below and it can be used as a u-disk to save information.



4. Set the computer time in accordance with local time.

5. Insert CD driver into CD-Rom. Copy the file 'SETTIME.bat' to any path of your computer, then double click the file and the 'TIMESET.txt' shows up. Please copy it to the removable disk as below.

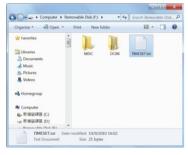

- 6. When you restart HD Mobile-i, you'll find the time is same as your computer, and the document named 'TIMESET.txt' was deleted automatically.
- 7.To ensure the time is correct, we recommend user updates the time every 6 months.

Date & Time setting (TV)

- Connect HD Mobile-i to TV or AV monitor by TV cable (The yellow cable should be connected with the video output port and the white cable connected with the audio output port). Also need to set the TV to AV mode;
- 2. Press and hold 'Power & Video On-Off' key for a second, real time image will display on TV or AV monitor;
- 3. Press 'Mode' key, monitor will show up the Manu Interface,Use 'Up / Down' key to enter Data Input option;



 
 Press 'Enter' key to adjust the date and time, and press 'Enter' again to save the data and quit as below;



5. Date and time setting complete.

Mobile-i installation

1. Open the SD card cover and insert a SD card into the slot. (support SD card up to 32GB).



2. You can select Suction Cup Holder or Fixed Holder according to your own chooses.

Then fix the Camera on the Holder as below.



10

a. Suction Cup Holder

Please clean up the windshield (inside), Put the holder in front of rear mirror then press the lever down to ensure the holder was fixed well.

b.Fixed Holder

Please clean up the windshield, Peel backing paper off and then stick it onto windshield by adhesive . Push firmly to secure holder.

3. Connect car charger to Mobile-i USB slot for power supply.

4. Lens adjust


You have two way to adjust the lens angle:

Connect Mobile-i to your own video device:

- a. Using applied TV cable to Connect Mobile-i to your own video device.
- b. Start the engine then Mobile-i will start recording immediately, real time image will display on the screen.
- c. Use Philips screw driver to loosen the Camera Lock, adjust the lens angle according to screen then lock it.

Recording

- 1. Start engine to power on Mobile-i, Green LED on and beep sound alert.
- 2. Red LED flash when Mobile-i start recording automatically.
- 3. Set the 'Mic on/off switch' to 'off' if no need sound recording.
- 4. Mobile-i need 1~2 sec. for data loading, If you stop the engine before the recording start, recording function may not start or stop automatically. Please check the LED light status and press Power & Video on-off switch to resume/stop recording manually.
- 5. Stop engine, Mobile-i keep on recording for 10 seconds and then shutdown.

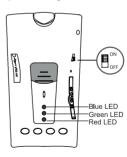

12

- 6. Stop engine, Mobile-i keep on recording for 10 seconds and then shutdown.
- 7. Every movie clip is three minutes and the interval between the movie clips is 1 second.
- After SD card memory is full, Mobile-i will erase the first 15mins data to free up the memory for continue recording.
- 9. You will get a Beep sound alert if the car charger loosened by vibration during driving. Mobile-I will stop recording after 10 sec.
- 10. "Mode, Enter, Up & Down' button for TV mode or PC connection only.
- PS. Certain car models may keep the Mobile-i power on even you stop the engine. If the red LED keep on flashing, it means car charger is still working. To save the car battery and avoid previous video are overwrited, please pull out the car charger.

PC Mode Operations

USB Mode

- 1. Press and hold the key 'Power & Video On-Off' for a second, then the green light is on.
- 2. Connect HD Mobile-i to PC by USB cable, then both the blue and green light are on.
- 3. A removable disk will show up in my computer immediately. (All the video were saved under the path\DCIM\100MEDIA)



4. Double click the video to play.

Remark: Media player must support MOV format.

TV Mode Operation

 
TV Mode

- 1. Turn on the TV and set it to TV or AV mode.
- 2. Press and hold 'Power & Video On-Off' key to turn on HD Mobile-i.
- Connect HD Mobile-i to TV or AV monitor by TV cable. (The yellow cable should be connected with video output port while the white cable connected with the audio output port).
- 4. Now the real time image will show on the screen.
- Press and hold 'Power & Video On-Off' key to start record. Every movie clip is three minutes. Press and hold 'Power & Video On-Off' key again to stop recording.

6. Double click 'Mode' key, the videos thumbnail will show up as below.



- a) Press any one of the four keys 'Up / Down / Mode / Enter' to select video;
- b) Press 'Power & Video On-Off' key to select video. Then press 'Enter' key to enter deleting option and press 'Power & Video On-Off' key to turn back to the video;



- c) Press 'Down' key to play video and press once again to pause;
- d) Press and hold the 'Mode' key to turn back to real time camera mode.

7. The 'Mode' key can switch to three manus as below.







Use 'Up / Down' key to select the option and press' Enter' key to enter into the detailed settings with different functions as below:

- a) Select 'Language' to choose language.
- b) Select 'Format' to format the SD Card, then all the data will be deleted.
- c) Select 'TV Mode' to set TV to NTSC or PAL system.
- d) Select 'Frequency' to set the light frequency to 50HZ or 60HZ.
- e) Select 'Date / Time' to set date, time and the format for date / time.
- f) Select 'Auto Power off' to set the auto power off time E.g.1min, 3mins.
- g) Select 'Beep Sound' to turn on or turn off the buzzer.
- h) Select 'Default Setting' to recover the default system.
- i) Select 'Version' to check the version of your HD Mobile-i.

Remark: If no need to set any details, please press 'Mode' key to turn back to the homepage manu.

Low Power Indication

HD Mobile-i Built-in Li-ion battery can work for a half hour. If the power is running low, the blue LED will flash for 5 seconds and then shut down. If it is recording, all the data will be saved and then shut down.

LED Status

Red, Green and Blue LED to indicate all the working status.

Working Status	Red	Green	Blue
Power off	OFF	OFF	OFF
Power on	OFF	ON	OFF
Recording	FLASH	ON	OFF
SD card bad contact	ON	ON	OFF
USB mode	OFF	ON	ON
USB mode (no SD card)	ON	ON	ON
Li-ion battery low	OFF	OFF	Product will flash for 10 secs. and then shut down automatically.

Specifications

Image Sensor	1.0Mega Pixels
Video Resolution	1280 x 720
Video Format	MOV
AV OUT	Yes
Cycle Recording	Yes
Lens Viewing Angle	120°
Frame Rate	30FPS
USB Interface	USB2.0
Power Supply	12V/24V Convert to 5V; Bulit-in Li-ion Battery
Operation System	Windows 2000 / XP / Vista / 7
OSD Language	Multi-languages
Dimension	105 x 60x 26mm
Product Weight	63g
Storage	SD Card, 1GB ~ 32GB
Working Temperature	-10 ~ 70°C
Storage Temperature	-30 ~ 85°C

Attentions

- 1. In order to protect users' safety and benefits, please follow the user manual to operate.
- 2. The SD card must be inserted in the indicated direction. Otherwise may cause damage or recording error.
- 3. Please stop using the product if any deformation, having an unknown smell or some other abnormal Phenomena.
- 4. Please use neutral solvent to clean the blot, do not use organic solvent.

Warning

- * Do not modify any accessories, or our company won't responsible for any malfunctions and calamities may cause.
- * Do not put the product into fire, or our company won't responsible for any malfunctions and calamities may cause.
- * Please stop using the product if find distortion in shape, having an offensive odor and some other abnormal phenomena caused by the high temperature in car.
- * Power supply accessories must be operated in the right way as user manual, or our company won't responsible for any malfunctions and calamities may cause.
- * Do not pull out SD card during recording, or the SD card life time and the recorded information will be influenced.

Our company reserves the right to the interpretation of the product and correlative contents.